

## DW-MAX Button Features



Name	Function	
① USB HOST	Used for data backup & firmware upgrade.	
② LED Lamps	Displays current operation status.	
③ Record/playback	EMERG	Activates emergency recording mode or stops recording at live mode. Gets back to live model from playback mode.
	I.REC	Timer function for EMERG Rec. (During EMERG Rec.) By pressing I.REC button, 1/2/3/4/5min long timer and I.REC off (Timer off) is selected.
	I.PLAY	Backward playback from the latest recorded data
	◀◀	Increases playback speed
	◀	Backward playback
		Pause
	▶	Forward playback
	▶▶	Decreases playback speed
④ Operation buttons	Double-key : 'short press' or 'press & hold'.	
	CH1 / ZOOM	Short press : selects channel no. 1. Press & hold : goes to ZOOM function mode.
	CH2 / SEQ	Short press : selects channel no. 2. Press & hold : goes to sequence function.
	CH3 / PIP	Short press : goes to PIP (picture in picture) mode. Press & hold : selects channel no. 3.
	CH4 / PTZ	Short press : selects channel no. 4. Press & hold : goes to PTZ operation mode.
	MENU	Short press : goes to system menu setup mode. Press & hold : Menu off
		Selects 4-split display or one channel display.
	+ -	Increase or decrease each value. PTZ ZOOM control
⑤ Arrow buttons	◀▶▶▶	Moves a mouse cursor at system menu / PTZ control
	OK	Works like mouse clicking. Selects each category at system menu setup mode.



[If you need technical assistant please Call:866-446-3516 option#2](tel:866-446-3516)