



## Quick start for the **MAX** Backup Viewer.

DW-MAX

v.3.08

Install and Launch the MAX IRS client software.


Select BACKUP VIEWER



Select OPEN to view the saved file.



Select the "AM4" file and then hit Open.

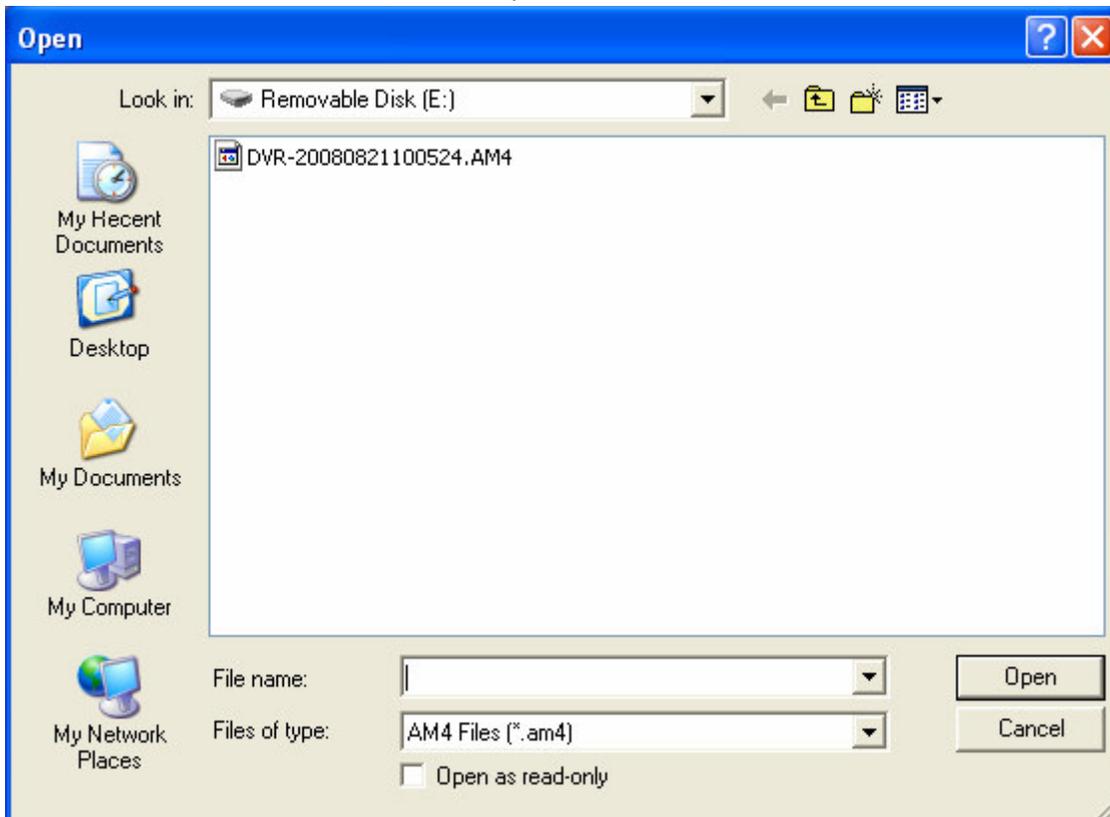

Then select PLAY. (single right arrow)



The Slider bar at the bottom (highlighted in red) has a square box you can grab and drag to quickly advance the time but only when the video is stopped or paused.

## 6-6. BACKUP VIEWER



- 1 Time display : Displays current time.
- 2 Recorded data display : Displays start time & end time of recorded data.  
Also, displays operating status during playback.
- 3 Screen display
  - a) SCREEN DIVISION : Selects full screen mode or 4-split mode
  - b) CHANNEL : Displays full screen for each channel.
- 4 Audio : set Audio ON/OFF
- 5 Operation buttons I
  - a) OPEN : Selects backup AM4 file.
  - b) EDIT : Enables to edit backup image, save and print.  
\*Edit function is available when one channel is selected.
  - d) AVI SAVE : Save backup images in AVI file format.  
\*\*AVI save function is available when one channel is selected.
  - c) EXIT : Ends backup player.
- 6 Operation buttons II: Search for recorded data.
  - a) Go to the beginning of recorded data and play.
  - b) Fast backward playback
  - c) Backward playback
  - d) Pause
  - e) Forward playback
  - f) Fast forward playback
  - g) Go to the end of recorded data and play.
- 7 Playback speed setting button : Able to adjust playback speed by using upper/ lower buttons.  
DELAY : Adjusts playback interval. The higher, the slower. (1, 2, 4, 8, 16, 32)

- 8 Play bar : Enables to search recorded data by using this bar.

※ Interface and functions of Player are subject to change without prior notice.

## Image EDIT

Click "EDIT" to go to image edit mode.



### 1 EDIT TOOL : User can adjust color tone of copied images using this buttons.

#### - Contrast

- : make bright part of image brighter and dark part of image darker
- : To reduce light and shade, lower contrast a little.

#### - Brightness

- : make an image brighter
- : make an image darker

#### - Sharpness

- : gives sharp-edge effect

#### - Blur

- : make an image soft


#### - Operation buttons

- : saves data in JPEG file format.  
It is saved in the folder where player is installed. ('C:\WEB\_BACKUP')
- : User can print current image selected.

### 2 EDIT : Return to player mode.

## AVI SAVE

Click "AVI SAVE" to go to AVI saving mode.

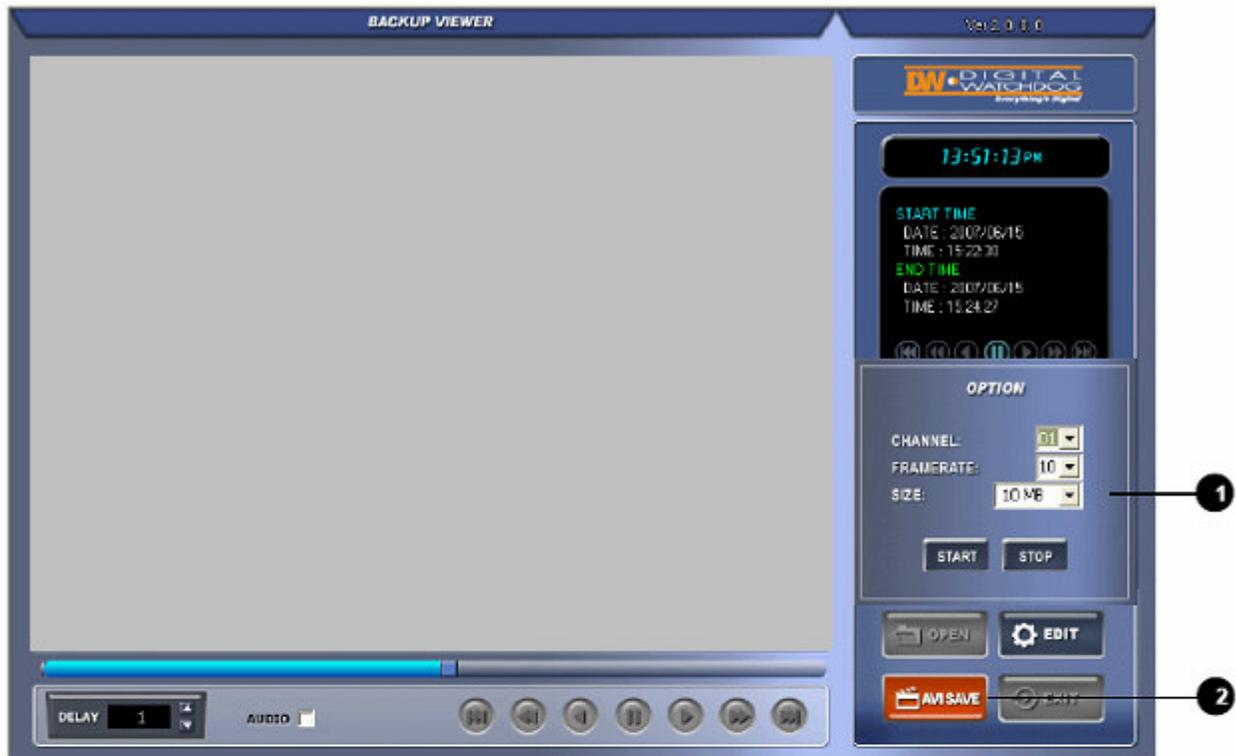

- 1 OPTION** : Used to save data in AVI file format.
  - CHANNEL : Selects channel
  - FRAMERATE : Decides frames per second of data to be saved.
  - SIZE : Decides the size of data to be saved automatically.
  - START : Starts saving
  - STOP : Stops saving. Once it is stopped, 'C:\WEB\_BACKUP' folder is opened automatically.
- 2 AVI SAVE** : Opens 'Option' setting to start AVI saving.  
Closes 'Option' setting after finishing AVI saving and go back to player mode.