

DW-VMAX IR Remote Instruction & Frequency


If you have more than two DVRs, you are able to control them individually with just one remote controller by setting up 'REMOTE ID'. The ID of the DVR and the ID of the remote controller must be same.

1. 'REMOTE ID' Setup in the DVR

To setup the "REMOTE ID" for IR remote controller, firstly decide the initial REMOTE ID in the DVR.

SYSTEM → SYSTEM INFO → REMOTE ID (as shown below).

- Remote ID is adjustable from '0' up to '255'.
- Default ID# for DVR and IR remote controller is set to "0".

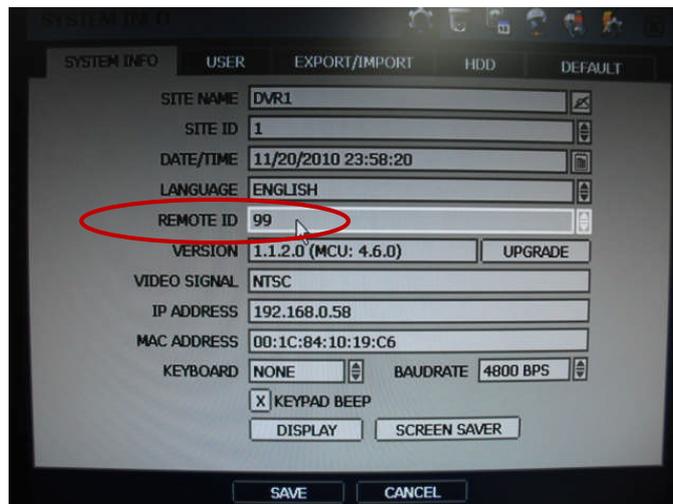

For example, let's change 'REMOTE ID' to '99' and click 'SAVE' to save the changed setting.

2. 'REMOTE ID' Setup in the remote controller

- 1) Press and hold 'ID' button in the remote controller for more than **5 seconds** as shown below.

*There is no beep sounds when you press ID button.



- 2) After pressing and holding 'ID' button for more than 5 seconds, leave the 'ID' button and press '099' to set the same REMOTE ID as the setting in the DVR.
- The REMOTE ID should be three digit numbers.
i.e) ID '0' → Press '000', ID '10' → Press '010', ID '255' → Press '255'
 - When you completely press the three digit numbers, you can hear the beep sound.



Do NOT hold 'ID' button when you start pressing three digit numbers.



- 3) When you hear the beep sound when pressing the last third digit number, the REMOTE ID setup is completely done.

IR Remote controller frequency of VMAX:

- IR Remote Controller Frequency: **37.92 KHz ± 3%**
- IR Sensor of VMAX Frequency: **37.9 KHz**