

Quick Setup Guide

DWHVT-SERIES


IP SETUP

Hardware Installation:

1. Install unit on network or directly to computer using the provided crossover cable.
2. Load the provided software on computer.
3. Run IP SETUP to locate the DWHVT.

Launch the admin page to make changes to the DWHVT software settings.
Default User/Pass ID: admin
Password: pass

Launch the main view to monitor the video coming into the DWHVT.

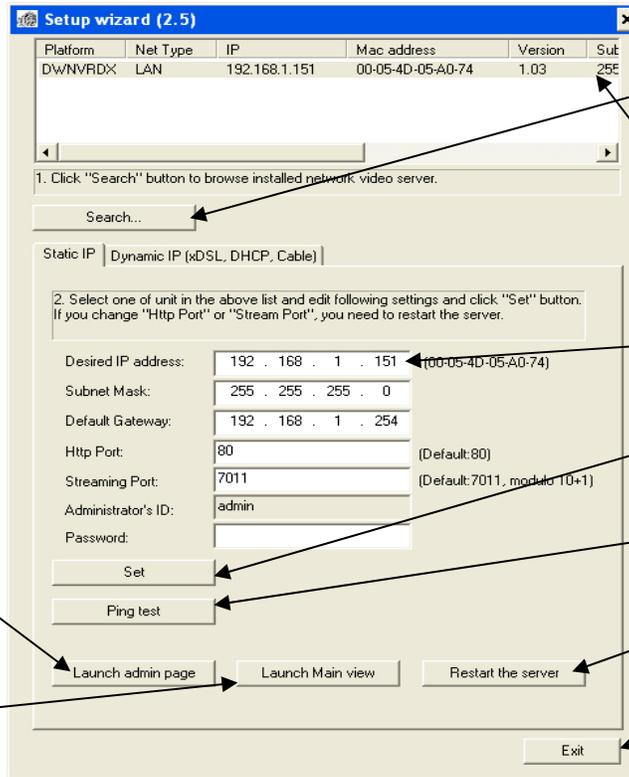

Using IP SETUP:

Searches for DWHVT units connected to the network.

Select desired DWHVT(s) that were found on the network and displays current settings.

Input custom settings and change port information.

Save settings that were changed.

Test that the DWHVT settings are correct.

Allows user to restart DWHVT remotely

Exit IP SETUP

Minimum Setup requirements for proper operation:

- Install DWHVT in desired location and connect all cables including: AC Power, network, optional microphone and external speakers.
- Remote computer is required for initial setup with a minimum requirement of Internet Explorer and TCP/IP connection.

Please visit our website for new products, contact information, news, downloads, and product specifications.

<http://www.digital-watchdog.com>

If you need immediate assistance, please have model and serial number of the unit ready.

Technical Support: (886) 446-3595

Before you begin:

- Please remember to set your time, date and time zone prior to recording data.
- Upon powering the DWHVT please allow 45-60 seconds for the unit to initialize and show ready light on the front panel.
- A UPS is mandatory for all Digital Watchdog units.
- Keep the CD and all other accessories that are provided with the DWHVT.
- Please register your DWHVT for software upgrades, technical news, and unparalleled tech support at:

www.digital-watchdog.com/register.htm

Quick Setup Guide

DWHVT-SERIES

Main View



Run Internet Explorer 4.0 or higher on the user's PC, enter DWHVT IP address you want to connect to and press the ENTER key. The first time you access DWHVT home page, the client viewer software is automatically downloaded and installed to allow you to view the MPEG4 video images. You must have the Active-X Control plug-in installed in your browser. If it is not already installed, you will be prompted to do so at this time.



Allows selection of a single channel for view/display



View selection allows the user to configure the channel display mode.



Expand: for using several expanded functions

Left, Right, Up, Down (Center Button) - Starts Auto Pan Zoom In and Out

Focus Far and Near (Center Button) - Auto Focus camera (if it is a supported function)

“Move to Preset” button moves the camera to the selected preset position Preset Selection Drop-down box Relay (DO) control button

File Viewer



The file viewer mainly consists of image display panel, playback control panel, intelligent time-map panel, calendar, file list panel and display mode panel, etc.

There are two ways of file playback. One is time-map based playback called “**intelligent playback**” and the other is file list based playback called “**file list playback**”.



The Call button initiates and ends two-way audio transmission. Going OFF HOOK rings the optional interphone device at the server end or opens the microphone in a speaker / microphone device.



The Audio button will enable or mute audio sound. The default button display is ON



The Admin button brings you to the log in screen for the Administration page for



ID is “**admin**” and Password is “**pass**” as a factory default. It is recommended that you change the ID and Password after first login to maintain your system security and integrity

PLEASE REFER TO THE PROVIDED MANUAL FOR INSTRUCTIONS ON THE ADMINISTRATIVE FUNCTIONS OF THE DWHVT