



STAND-ALONE DVMR

ALL ABOUT IMAGE RECOGNITION & PROCESSING

DIGITAL VIDEO
DIGITAL VIDEO RECORDER
RECORDER



STAND-ALONE DVMR



8 Channel Digital Video Multiplex Recorder

User's Manual VER 2.0



Stand-alone DVMR

The most stable and reliable real stand-alone Digital Video Multiplex Recorder

ALL ABOUT IMAGE RECOGNITION & PROCESSING

SAFETY PRECAUTIONS

CAUTION
RISK OF ELECTRIC
SHOCK. DO NOT OPEN!



CAUTION : TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT OPEN COVERS.
NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.

This label may appear on the bottom of the unit due to space limitations.



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated " dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (Servicing) instructions in the literature accompanying the appliance.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE UNITS NOT
SPECIFICALLY DESIGNED FOR OUTDOOR USE TO RAIN OR MOISTURE.



Attention: installation should be performed by qualified service Personnel only in accordance with the National Electrical Code or applicable local codes.



Power Disconnect. Units with or without ON-OFF switches have power supplied to the unit whenever the power cord is inserted into the power source ; however, the unit is operational only when the ON-OFF switch is in the ON position.
The power cord is the main power disconnect for all unites.

FCC INFORMATION

A CLASS A computing device subject to certification by the Commission shall be identified pursuant to par.2.925 et Seq of the chapter. In addition, the label shall include the following statement:

**This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received,
including interference that may cause undesired operation.**

Where a device is constructed in two or more sections connected by wires and marketed together, the statement specified in this Section is required to be affixed only to the main control unit.

The users manual or instruction manual for the EUT shall contain the following statement or equivalent.

Caution : Changes or Modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

If the EUT requires accessories such as special shielded cables and/or connectors to enable compliance with emission limits, the instruction manual for the EUT shall include appropriate instructions on the first page of the text concerned with the installation of the device that these special accessories must be used with the device. It is the responsibility of the user to use the needed special accessories supplied with the equipment.

For a CLASS A digital device or peripheral, the instructions furnished the user shall include the following or similar statement placed in a prominent location in the text of the manual.

Note : This equipment has been tested and found to comply with the limits for a CLASS a digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Chapter 1 . Product package

1-1. The contents of package	3
1-2. Name and function of each button (front panel)	4
1-3. Name and function of each button (rear panel)	5

Chapter 2. Installation procedure

2-1. Camera connection	6
2-2. Monitor connection (Composite monitor)	6
2-3. Monitor connection (S-VHS)	7
2-4. VCR & VIDEO PRINTER connection	7
2-5. Sensor connection	8
2-6. Network connection	8
2-7. HDD connection	9
2-8. Power connection	9

Chapter 3. Operation





3-1. DVR SYSTEM Log-in	10
3-2. Recording	11
3-3. Playback	14
3-4. Set-up	16
1. Basic operation	16
2. CAMERA SETUP	16
3. DISPLAY SETUP	17
4. TIME/DATE SETUP	19
5. RECORD SETUP	19
6. HDD MANAGEMENT	21
7. MISCELLANEOUS SETUP	21
8. TCP/IP SETUP	24
9. FACTORY DEFAULT	26

Chapter 4. Specification and Configuration

4-1. SPECIFICATIONS	27
4-2. Configuration Stand-alone DVMR	28
4-3. RS-232C Hex-code table	28
4-4. Arrange of RS 485 and RS-232C pin	29

Chapter 5. Manual for Remote Viewer Software(TCP/IP) 30

Speed of playback in DVMR unit according to scan rate set in 4-7-b).

Scan rate set in 4-7-b)	 or 	 or 
1x	1x	1x
2x	1x	2x
4x	1x	4x
8x	1x	8x
16x	1x	16x
32x	1x	30x
64x	1x	60x

Maximum playback speed of DVMR is 60x.

10 : Command button.

We have 3 different buttons, that are, save, print, and event, and those buttons work only when stop button is pressed.

a) Save

During searching recorded pictures, you can save pictures one by one in the folder in client PC by pressing save button. Press Save button while you see recorded picture, and picture you selected by pressing Save button shall be save on the folder you already assigned under the file name of year-month-day-hour-minute-second in jpg format.

b) Print

During searching recorded pictures, you can print picture, one by one, you see, by pressing Print button.

c) Event

Press event button to see alarm list saved in DVMR unit, and you can search recorded pictures based on event list by clicking any one of list.

11 : Calendar.

You can select date and time to search pictures recorded at selected time and date. You can refer to start and end of recording in 7.

Notice : From time to time, connection shall be cut unexpectedly due to conditions of network line.

Whenever it is cut, quit search window by pressing power switch(1), and then press connect button in live-view window and scan button to enter into search window again, to continue searching.

Notice : Compatibility of Remote Viewer Software with different kinds of operating systems and PC hardware may not be simply specified due to the characteristics of network that it is much related with not only PC hardware and operating system but also other software installed on the client PC and conditions of network (internet) line. Basically, Remote Viewer Software is compatible with typical Windows operating system from Windows 98 to Windows XP.

Notice : To see continuous live view, we recommend not to select motion recording in RECORD SETUP menu of DVMR. If it is set at motion recording in SETUP menu of DVMR, image transmission is done only there is motions detected.

Notice : While you search recorded data using client software in client PC, DVMR unit to which you access via IP network is in playback mode, and no recording is done as far as you search recorded data. However, while you are in connection with DVMR unit via IP network for live view, DVMR unit continues to record but at a little lowered recording rate. Therefore we recommend you to access to DVMR unit only when it is necessary.

About this document

Before installing stand alone DVMR, be sure to thoroughly review and follow the instructions in this User's Manual. Pay particular attention to the parts those are marked **NOTICE**.

Also, when connecting with external application, first turn the power OFF and follow manual instruction for appropriate installation.

Before reading this document


1. This document is intended for both the administrator and users of stand alone DVMR.
2. This manual contains information for configuring, managing and using stand alone DVMR properly.
3. To prevent fire or electrical shock, do not expose the product to heat or moisture.
4. Be sure to read this manual before using stand alone DVMR Model, even before installing HDD.
5. Check electricity at the place you want to install the DVMR unit is stable and meets our electricity requirements.
Unstable electricity will cause malfunction of the unit or give critical damage to the unit.
6. Several chips on the main board of the DVMR unit and hard disk drive inside the unit generate heat, and it must be properly discharged.
Do not put any objects just beside exhaust port(fan) on the left side of the unit and do not close up an opening (fresh air in-take) on the right side of the unit..
7. Put the DVMR unit at well-ventilated place and do not put heat-generating objects on the unit.
When it is installed inside 19 inch mounting rack together with other devices, please check built-in ventilation fan of the rack is properly running.
8. For questions and technical assistance of this product, contact your local dealer.

Chapter 1 . Product Package

1-1. The contents of package

1. 8 ch stand-alone DVMR unit

Record data of pictures from camera on hard disk drive after converting it into digital data.

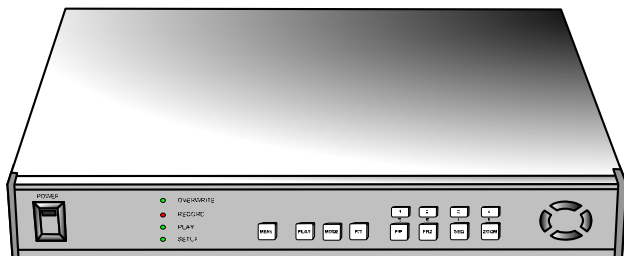

2. User's manual for 8 ch DVMR

Describe how to install and operate this DVMR unit.

3. Remote controller

IR remote controller enables an user to operate DVMR unit apart from the unit.



4. DC power adapter and power cable

Convert AC 110V or AC 220V into DC 12V to supply to DVMR unit.



5. Search recorded pictures via IP network



Function of each button in search window :

- 1: **Power** switch. Press power switch to quit.
- 2: **Full screen** button. Press full screen button to search recorded picture channel by channel in full screen.
- 3: **Quad** button. Press Quad button to search recorded pictures in quad screen, 4 pictures from 4 channels at the same time.
- 4: **Screen division** button : If press "+" button, it screen division is changed from 4 to 9 or from 9 to 16. "-" button reduce screen division.
- 5: **Time** of recording. It indicates when the pictures you see recorded.
- 6: **Channel selection** button. Press any one from 1 to 4 to see picture of corresponding channel, if you first chose full screen button(2).
- 7: **Time selection** button. You can set time to search by dragging yellow mover to the left or right. See time displayed in green color and find an exact time from which you search.
- 8: **Start and end** of recording. It shows time from which recording started and recording ended. Further it show time from which search will start.
- 9: **Search operation** button. You can search recorded data using various buttons useful for searching effectively as follows.



: Play fast backward
(Speed set in SYSTEM SETTING)

: Play Backward(x1)

: Play forward(x1)

: Play fast forward
(Speed set in SYSTEM setting)


: Stop

: Move to start of recording
(Press stop button first before this button)

: Move to previous hour (on the hour).
Press stop button first before this button.

: Move to next hour (on the hour)

: Move to end of recording
(Press stop button first before this button)

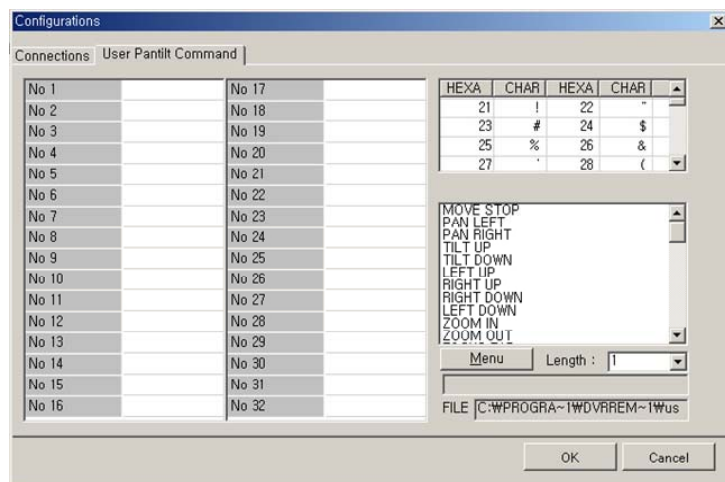

USER PANTILT COMMAND

- It is to input protocols for specific PTZ camera you will connect to 16ch DVMR unit, to control PTZ camera while you see live pictures in the client program.
- You can save protocols of specific PTZ camera in the form of computer file (text file). Prepare text file of protocol for PTZ camera and save it on your PC. In the User Pantile Command window, press [Menu] button and again press [Load User PT File]. Then you can assign text file of protocol for PTZ camera you prepared in advance. It is very convenient function.
- If you want to control PTZ camera using buttons on the front of 16ch DVMR unit, you must input the same protocol into DVMR unit in PAN/TILE CMD SETUP.


b) **Scan.** : Press scan button to enter into search window. Using various operation buttons, you can search recorded pictures, save selected pictures on client PC, or print pictures. Refer to following paragraph "3. Search recorded pictures over IP network" for details

8) PTZ control. You can control Zoom, Focus, and Pan/Tilt of camera while you see live pictures via IP network. Of course, you must first input PTZ protocol for a specific PTZ camera you connected to your DVMR unit, into your DVMR unit. You can control PTZ camera with various of commands in USER PANTILE COMMAND window above.

When you press corresponding buttons for Pan/Tilt control, press a couple of second every time you press to take care of data transmission speed through IP network. Otherwise, there is a possibility that given protocol is transmitted repeatedly, regardless of your intention.


Notice : From time to time, connection shall be cut unexpectedly due to conditions of network line, and you will see disconnect button(3) is activated. Just press connect button(2) again, and you can continue to see live pictures.

1-2. Name and function each button (front panel)

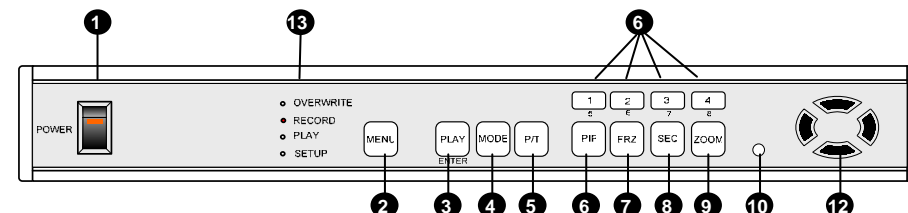

- 1. POWER SWITCH WITH LED** : DC power switch with LED
Generally speaking, cutting power to system may cause trouble in DVMR system or damage to HDD when HDD is in writing process, and we ask you to press [MENU] button first to protect HDD from being damaged or system failure before you press DC power switch off in practical operation.
- 2. MENU** : Used to check or change parameters settings in SYSTEM SETUP. After pressing [MENU] button, input password and press [ENTER] button to enter into SYSTEM SETUP.
- 3. PLAY/ENTER** : Starts playback, and in some functions, it is used as the SELECT key. Press shortly and it starts playback. If you press this button for a long time, you enter into GO TO menu to start playback from image you want to start.
- 4. MODE** : Changes screen division. Whenever you press [MODE] button, screen division is changed from full screen to 4-split screen, 9-split screen in sequence, both in live or playback mode. To change channel in full screen mode, just press number button. If you press [MODE] button for a long time, it changes type of monitor connected to DVMR unit from COMPOSITE to VGA, or from VGA to COMPOSITE, in case VGA option is included in DVMR system.
- 5. P/T** : Manages PAN/TILT CONTROLLER. To control PTZ camera connected to DVMR unit, you have to select model of PTZ camera in PAN TILE CMD SETUP/MISCELLANEOUS SETUP.
- 6. 1/5, 2/6, 3/7, 4/8** : Chooses each indicated camera in full screen mode. Each button is double number button, and pressing [1], [2], [3], and [4] for a very short time is for 1, 2, 3, and 4 respectively, and pressing [1], [2], [3], and [4] for a long time is for 5, 6, 7, and 8 respectively.
- 7. PIP** : Assigns PIP (Picture In Picture)
- 8. FRZ** : Displayed screen is paused.
- 9. SEQ** : To see display screen in rotation from channel number 1, 2, 3, and so on, both in live and playback mode. It also change Quad screen from 1/2/3/4 to 5/6/7/8.
- 10. ZOOM** : Enlarges the display screen by 200%. Digital zooming.
- 11. Remote Controller Sensor Input Window**
- 12. Direction button** : [LEFT], [RIGHT], [UP] and [DOWN]. In playback mode, [LEFT] and [RIGHT] buttons are for selecting playback direction(forward/backward), and [UP] and [DOWN] buttons are for increasing or decreasing speed of playback.
Setting video system : In the process of booting, we can set video type (NTSC or PAL) using direction buttons. While you press [UP] and [LEFT] button at the same time, turn on DC power switch on the front panel to set video type at NTSC. Immediately after you turn on DC power switch, you shall hear beep sound, and it is set at NTSC and stop pressing [UP] and [LEFT] button. If you turn on DC power switch with [UP] and [RIGHT] button pressed, it is set at PAL system. Setting is memorized in the system, and it is not necessary to do it again in the next booting, unless you change video system of camera.
- 13. LED Lamps** : Represent status of operation. OVERWRITE/RECORD/PLAYBACK/SETUP.
NOTICE : If the Input window (IR receiver) is covered, the remote controller may not work.
NOTICE : If several buttons are simultaneously or incorrectly pressed, the system may not be operated improperly.

1-3. Name and function each button (Rear panel)

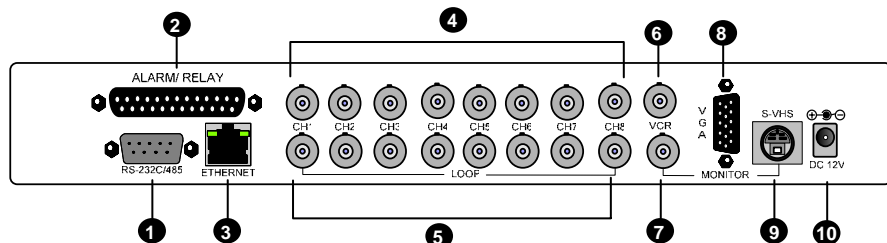

1. RS-232C Port Connection

2. Sensor Input/Output

3. LAN (TCP/IP)

4. Camera Connection

5. LOOP Output

6. VCR Connection

7. MONITOR Connection

8. VGA Connection


9. S-VHS Connection

10. D/C Power Connection

NOTICE : When connecting with other applications, be sure to turn off the system.

7) : **Set** button. 2 different set buttons

a) **Setting** : Press this button to input IP Address (or select a unit of 16ch DVMR unit among many) and others and to set circular monitoring interval and scan rate, to assign folder where you want to save pictures you will select during search, to input protocol for PTZ cameras or select any model of PTZ cameras among many models whose protocols you already input, as following dialog box.

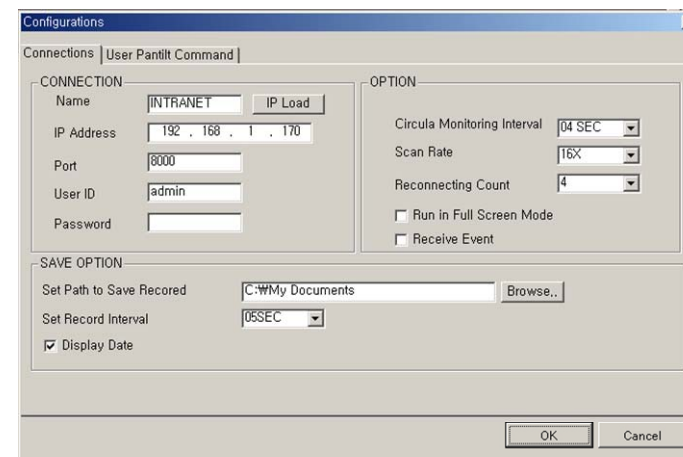**CONNECTION**


- On the Name box, you are requested to input name of 16ch DVMR units, in case you want to access to any one DVMR unit among more than a unit. You can save IP information in Configurations Window and select name of DVMR unit to which you want to access.
- Input IP Address you already input into DVMR unit (TCP/IP SETUP) in **IP ADDRESS**.
- Input Port number you already input into DVMR unit in **PORT**. Just input 8000, which is default port number. In some cases, port number 8000 is blocked by firewall, and you have to input different number like 8090 which is not blocked.
- Input "admin" in **ID**.
- Input the same password you set into DVMR unit in **PASSWORD**. Default password of 16ch DVMR unit is blank (null). You are requested to enter your own password using number keys from 1 to 16 on front panel of 16ch DVMR unit

OPTION

- Select **circular monitoring interval** ranging from 0.1 sec to 10 sec. The smaller it is, the faster picture of each channel rotates. The absolute circulation interval is a little different from set value depending on data transfer rate of IP network.
- Select **scan rate** ranging from 1x to 64x. The larger it is, the faster search speed is. The absolute search speed is a little different from set value depending on data transfer rate of IP network.
- Reconnection count : In case disconnected due to some reason, client program tries to reconnect after this time.

SAVE OPTION

It is to assign folder on which you want to save pictures you will select while you search recorded pictures, picture by picture.

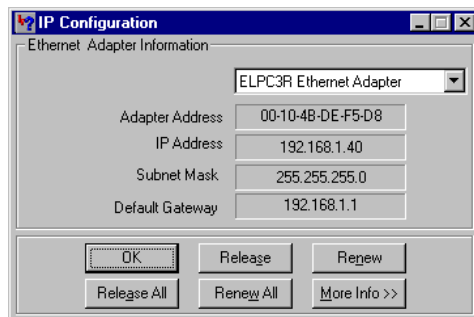

Now, hit the "Release" button and then hit "Renew". If all goes well, you'll get new information, and it is for your DVMR unit. Write down this information on separate paper and input IP Address, Subnet Mask, and Default Gateway into your DVMR to which you want to access via IP network.

(c) Confirm if IP Address is working by executing pingtest

Execute pingtest with IP Address which you assigned to DVMR unit, check if it is successful before you try to access to DVMR unit via IP network. If it is not successful, you may not be able to access to DVMR unit via IP network, and we recommend you to get help from your network administrator.

4. Live view via IP network

Click Remote Viewer icon to view live pictures via IP network. You will see then following window.




Function of each button in live-view window :

- 1) : **Power** switch. Press power switch to quit. Before press power switch button, press disconnect button first.
- 2) : **Connect** button. Press connect button to connect to DVMR unit via IP network to see live pictures of DVMR unit.
You will see the same live pictures, which are displayed on monitor of DVMR unit with a certain time delay depending on transfer rate of IP network.
- 3) : **Disconnect** button. Press disconnect button to cut connection to DVMR unit via IP network.
- 4) : **Screen division** button. You can select to see pictures of any single channel, 4, 9, and 16 channels at the same time. You can select channel number from 1 to 16 to see pictures of selected channel. If you selected 4, you will see channel number from 1 to 4 are all activated.
- 5) : **Channel number** button. You can select channel number to see live pictures from selected channel.
- 6) : **Status** window. It shows Date and Time. Further it displays "Connection established" and a circular fan on the left bottom is rotating when connection button is activated, or "Waiting for connection" when disconnection button is activated.

Chapter 2. Procedure

2-1. Camera Connection

Connect the camera to the CAMERA INPUT on the Rear Panel of the system.

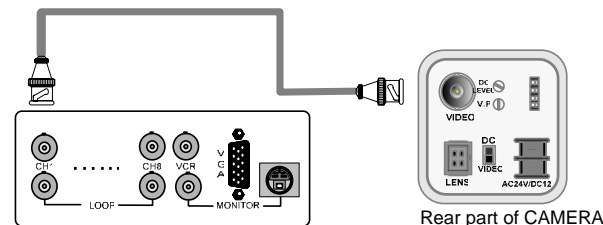


Rear part of CAMERA

Setting video system : In the process of booting, we can set video type (NTSC or PAL) using direction buttons. While you press [UP] and [LEFT] button at the same time, turn on DC power switch on the front panel to set video type at NTSC. Immediately after you turn on DC power switch, you will hear beep sound, and it is set at NTSC and stop pressing [UP] and [LEFT] button. If you turn on DC power switch with [UP] and [RIGHT] button pressed, it is set at PAL system. Setting is memorized in the system, and it is not necessary to do it again in the next booting, unless you change video system of camera.

2-2. Monitor Connection (Composite Connection Method)

Connect the monitor to the MONITOR OUT on the Rear Panel of the system

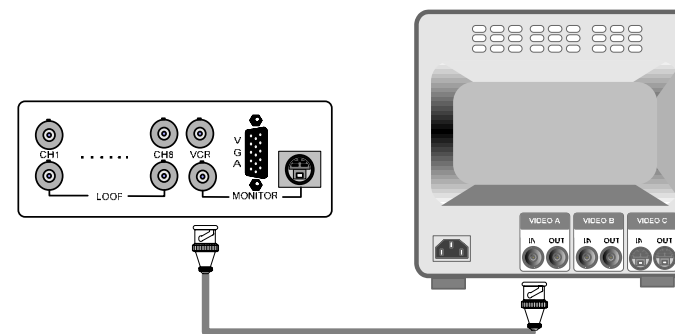


Screen positioning : If picture displayed in your monitor is not at the center of monitor, you can relocate images to make them shown in the middle of monitor. Press [P/T] button for a long time to enter into screen position mode, and you can adjust location of pictures using [UP], [DOWN], [LEFT] and [RIGHT] buttons. Press [P/T] button for a long time again to quit screen positioning mode.

If you press [ENTER] button in the process of screen positioning mode, location of pictures return to original location set by manufacturer.

Notice : Connect camera or monitor to DVMR unit while DC power switch on the front panel is off.


2-3. Monitor (S-VHS) Connection

Connect S-VIDEO Monitor to MONITOR OUT(S-VHS) on the Rear Panel of the system.

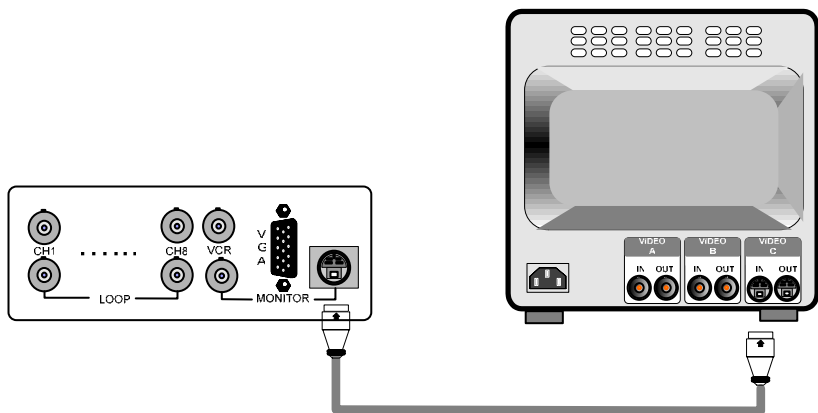

2-4. VCR & VIDEO PRINTER Connection

Connect VCR or VIDEO PRINTER to VCR OUT on the Rear Panel of the system.

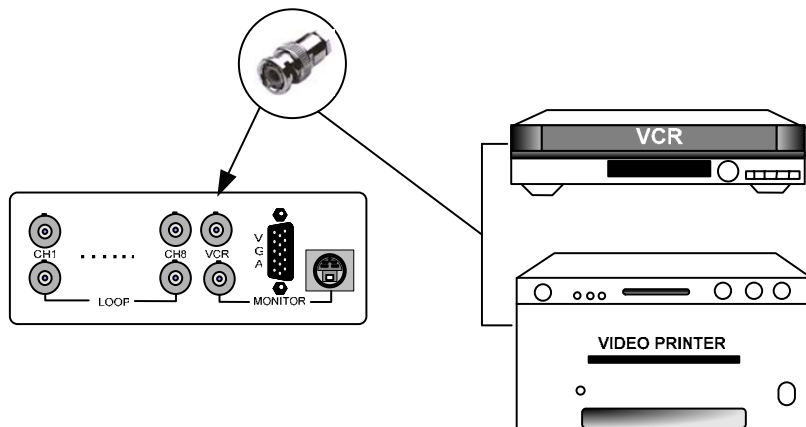

3. How to get IP for DVMR unit

There is 2 different ways to input IP address and other data into DVMR unit.

The first way is to make DVMR system get IP address from DHCP server automatically.

It is only possible in case DVMR unit is connected to cable modem (dynamic IP), Intranet under DHCP server or IP sharer which support DHCP. Select "DHCP" in TCP/IP setup to get IP address automatically. The second way is you get IP address and other data before you connect DVMR unit to network and later input this IP address and other data into DVMR unit. Except the case you already know IP address assigned for DVMR unit, get IP address for DVMR unit as following process in the client PC from which you want to access to DVMR unit via IP network. If you connect DVMR unit to leased line with static IP already known, it is not necessary to follow following process to get IP information.

a) "ipconfig" or "winipcfg"

Execute "ipconfig" command in the client PC with Windows 2000 and Windows XP, and "winipcfg" command in the client PC with Windows 98 and ME, and you will get IP informations, that are IP Address, Gateway, Subnet Mask. Write down those numbers and input into DVMR unit to which you are going to access via IP network. As far as DVMR is in operation without turning off, it is considered that this IP Address is assigned just to this DVMR unit. Then, restart the client PC to get different dynamic IP address for client PC after you get IP information for DVMR unit. Derail procedure to get IP information in different Windows is as follows.

㊟ Window 2000

First you need to get to the command prompt using the command shell. The best way is from the run menu.

Start-> Run --> and type in **Command**. Then either hit enter or click OK. At the command prompt, type in **ipconfig**. This will pull up the information that you need to find IP Address for DVMR unit.

㊟ Windows XP

If you want to get IP Address for your DVMR in Windows XP, you can run **ipconfig** in one easy step. Open Run and type "cmd /k **ipconfig**" without the quotes. This will open the command prompt and start **ipconfig** the easy way. Assign IP Address you get to DVMR unit.


㊟ Windows 98 and ME

To run winipcfg, grab the Run item from the Start menu and type **winipcfg** into the Open: box. Hit OK (or RETURN). Those comfortable with DOS can launch it from a DOS prompt.



When **winipcfg** launches, you'll get a window like this one:


c) ADSL(ADSL modem with PPPoE protocol) line with static IP or dynamic IP.

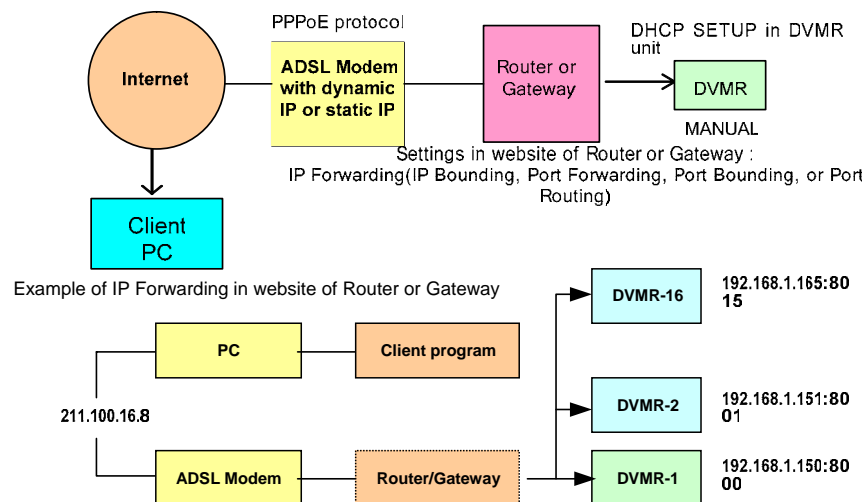


IP forwarding is what we have to set in web site of Router or Gateway to connect external Port to internal IP assigned by Router or Gateway.

d) In the same Intranet : Supports

- LAN under DHCP (Dynamic Host Configuration Protocol) Server

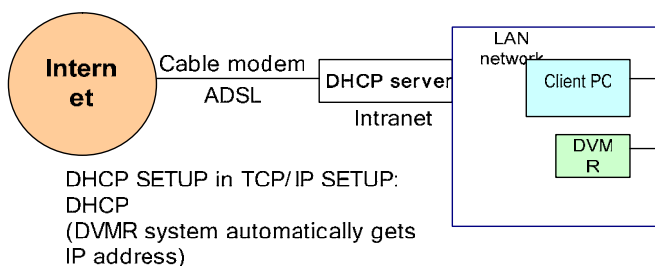


- LAN under IP share

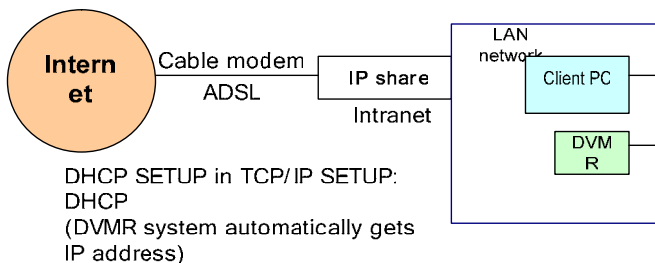

2-5. Sensor Connection

You can connect dry-contact type sensors. In case of sensors with TTL output (5 Volts system), GND of sensor must be connected to GND of DVMR unit and signal line to alarm input from D1 to D16 as shown in following figure.

Short-circuit between any of D1 from D16 and GND is recognized as an alarm.

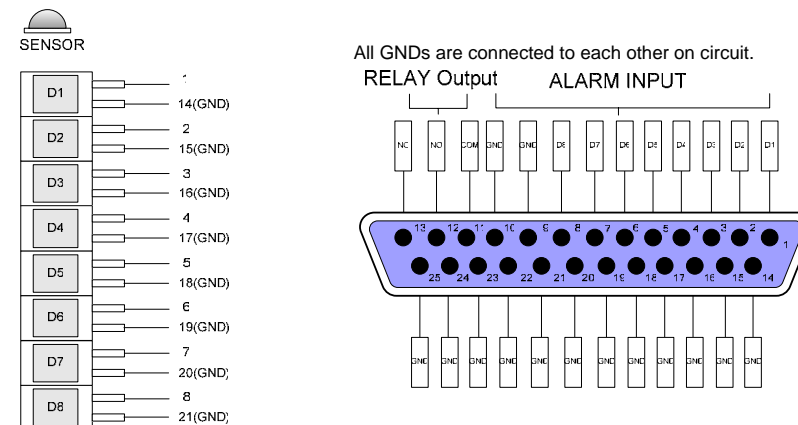

Relay output is output in case there is an alarm input, and is connected to external device using COM-NO (Normal Open) or COM-NC (Normal Close) contact.


2-6. Network Connection

RS-232C : Connection to PC to operate DVMR

RS 485 : Connection to PTZ camera


RJ-45 (ETHERNET) : Connection to LAN, WAN or Internet

VGA : Connection to PC monitor

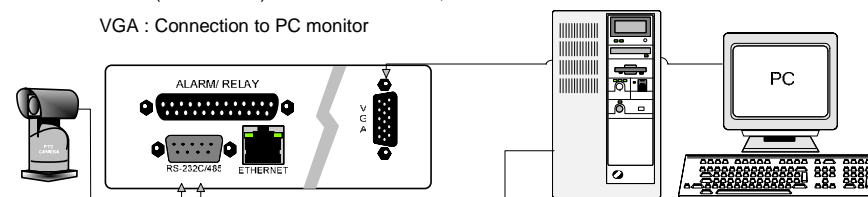

► For more details, refer to arrangements RS-232c pins in page 29.

2-7. HDD connection

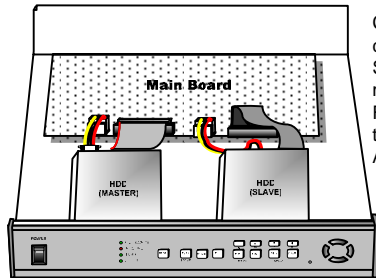

Connect main board and HDD using IDE HDD cable and power cable included in the package. If you install a unit of HDD, jumper Setting of HDD must be on (DS) Master, as specified by HDD manufacturer.


Fix HDD on the bottom of DVMR case using screws included in the package. Screws must be inserted from outside of the bottom. And CD-RW drive must be on Slave.

Notice : Formatting before installation is not required, because DVMR system automatically detects and formats HDD. In the first operation after installation of HDD, first set at FACTORY DEFAULT in setup menu of DVMR system and then do HDD CLEAR in HDD MANAGEMENT in setup menu of DVMR system.

Notice : In case you see "UNKNOWN HDD DETECTED" message is displayed after booting process, just clear HDD and set at FACTORY DEFAULT to make this HDD be detected by DVMR system.

2-8. Power Connection

Connect the power to the POWER CONNECTION on the Rear Panel of the system, and turn on the switch.

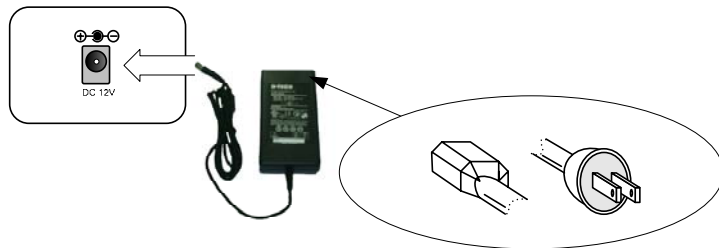

Notice : To turn off DC power switch on the front panel of DVMR case, be sure to press [MENU] button first. If you press [MENU] button, DVMR system stops recording, and you can cut power to DVMR unit while HDD head is not in writing mode. It is necessary to press [MENU] button first and turn DC power switch off for protection of HDD head from being damaged and eliminate possibility of malfunction of DVMR unit.

► Turn on the POWER and Log-in to the system

Follow instruction in the Log-in part of this manual to input the PASSWORD and start the system. Factory default password for account manager and user, set by manufacturer, is null, therefore just press [ENTER] button in case DVMR system asks to input password, as far as you did not change password.

► Detail setup in SYSTEM SETUP


For detail setup, refer to the instruction of SYSTEM SETUP.

Chapter5. Manual for Remote Viewer Software (TCP/IP)

General description : TCP/IP option enables users to view live pictures, search recorded pictures, or control PTZ camera via Internet line, far apart from the DVMR unit, and users can store selected recorded pictures on HDD of client PC. Our stand-alone DVMR does not adopted web browser method for access to DVMR unit via Internet line, and you must install Remote Viewer software included in the package on client PC before you try to access to DVMR unit over IP network.

1. TCP/IP SETUP in DVMR unit

Before you install Remote Viewer software, be sure to input IP address and others in TCP/IP SETUP of DVMR unit. Then, execute **SETUP.exe** on Remote Viewer software CD included in the package of stand-alone DVMR with TCP/IP option.

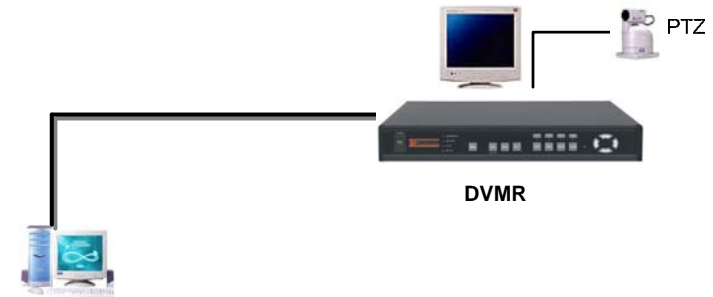


Install client software (Remote viewer) to access to DVMR unit via Internet line.

2. Conditions of IP network

To access to our DVMR unit via IP network, you have to connect DVMR unit to IP network as one of followings and assign IP address, Subnet mask, and Gateway to our DVMR unit. Our DVMR unit accepts static IP and it also work in case both DVMR unit and client PC are connected to the same Intranet (LAN).


- Static IP :** If DVMR unit is connected to leased line with static IP, we can access to DVMR unit via Internet line far apart from DVMR unit. (DHCP SETUP in TCP/IP SETUP : **MANUAL** (Input IP address manually)
- Cable modem with dynamic IP :** If DVMR unit is connected to cable modem with dynamic IP, we can access to DVMR unit via Internet line far apart from DVMR unit.

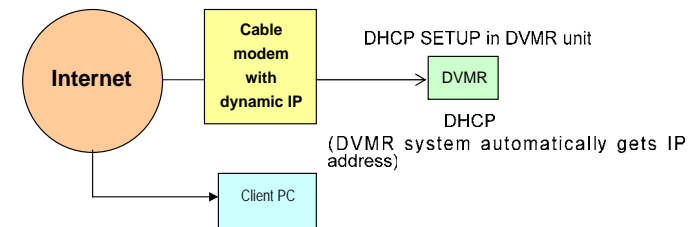


4-4. Arrangement RS-232C and RS-485 pin

◀ RS-232C

Pin No.	Definition
1	NC
2	RxD
3	TxD
4	SD-(RS 485)
5	GND
6	SD+(RS 485)
7	NC
8	NC
9	NC

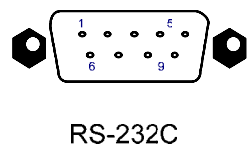


RS-232C

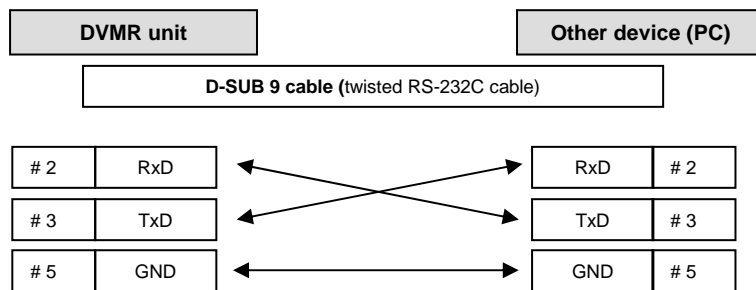

Connection to PC using RS-232C cable

Chapter 3. Operation

3-1. DVMR SYSTEM log-in

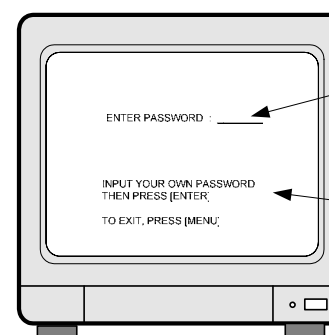

Login DVMR SYSTEM

- 1) Press [MENU] button to enter the system menu after starting the system.
- 2) DVMR system asks you to enter password to verify authority of user as shown on the left.
- 3) When you get the DVMR, you can enter into Setup menu by just pressing [ENTER] button.
- 4) In case you already have changed the password, enter your own password.

- 5) Press [ENTER] button after you enter password, to enter into SETUP menu.
- 6) After entering to setup menu, press [MENU] button to go back to the system menu.

▷ If password entered matches previously set password, "PASSWORD OK" message appears and you can enter into SYSTEM SETUP.

If password entered does not match previously set password, DVMR system just go back to initial mode, that is, showing live pictures and recording as set before.

▷ Factory default password is [ENTER]

NOTICE : We recommend you to enter your own password as per procedure in PASSWORD SETUP/MISCELLANEOUS SETUP of setup menu.

NOTICE : Be sure to memorize the changed password.

In case you forgot password, you can not enter into SYSTEM SETUP and can not change parameters of DVMR operation, and just leave DVMR unit to run as settings you done before. In case you forgot own password and want to enter into SYSTEM SETUP, please contact dealer to get instruction for entering into SYSTEM SETUP for password change.

3-2. Recording

1. PLAY


Changes to Playback Mode from Recording.
If pressed shortly, playback starts from the stop point in previous operation.

If pressed for a long time, you can enter into GO TO MENU and select by PERCENT, TIME/DATE, or EVENT LIST the point from which you want to replay.

2. MODE

Changes screen division in the sequence of full screen of specific channel, 4-split screen, and 9-split screen whenever pressed.

If it is pressed for a long time, it changes type of monitor from COMPOSITE to VGA or VGA to COMPOSITE in case VGA option board is included in the DVMR package. In case you connect CRT type PC monitor to DVMR unit, and monitor type is set at COMPOSITE, pictures displayed shall be flickering.

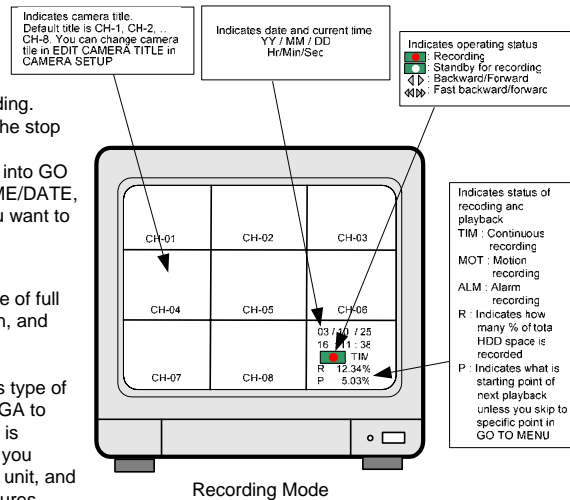

3. P/T


In case you connected PTZ camera to any channel of DVMR unit, press [P/T] button first to control this camera using operation buttons on the front panel.

Be sure to select model of PTZ camera whose protocol is already incorporated into DVMR system. Model of PTZ camera whose protocol incorporated is PELCO D type, DRX-502A. For PTZ camera whose protocol is not built-in protocol, you have to input protocol of that camera in USER DEFINE /PAN/TILT CMD SEPUP/MISCELLANEOUS SETUP.

After pressing [P/T] button, command with channel number(from 1 to 8) in front is displayed whenever you press [LEFT] or [RIGHT] button.

Select channel number first by pressing [UP] or [DOWN] button, and select command by pressing [LEFT] or [RIGHT] button.

Then, PTZ camera will move as per command you selected as far as you press [ENTER] button.

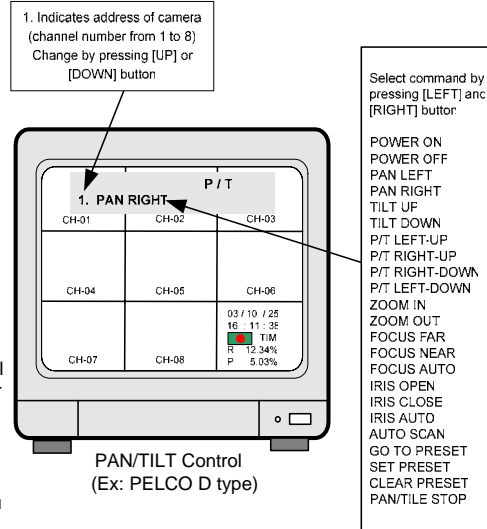

Press [P/T] button once more to stop PTZ camera control.

4-2. Configuration



4-3. RS-232C Hex-codes table

Following ASCII-code are for programmers who want to control DVMR unit via RS-232C port.
RS-232C specification (baud rate/parity/data length/stop bit) : 57600, N, 8, 1

1 Byte ASCII-code.

MODE	'D'	PIP	'I'	CH1	'1'	CH5	'5'	UP	'U'
FRZ	'F'	P/T	'T'	CH2	'2'	CH6	'6'	DN	'J'
SEQ	'Q'	MENU	'M'	CH3	'3'	CH7	'7'	LEFT	'H'
ZOOM	'Z'	ENTER	←	CH4	'4'	CH8	'8'	RIGHT	'K'

Chapter 4 . Specification and configuration

4-1. SPECIFICATIONS

MODEL NO	Stand alone DVMR	
VIDEO I/F	INPUT	8 CH INPUT 1.0 VP-P, 75 OHM UNBALANCED (BNC TYPE)
	OUTPUT	3 OUTPUT VBS : 1.0VP-P.75 OHM UNBALANCED (BNC TYPE)
	HORIZONTAL RESOLUTION	480TV LINES
	S/N RATIO	MORE THAN 4dB
	COLOR	16.7 MILLION
MONITORING METHOD	SPLIT SCREEN	FULL, QUAD DISPLAY
	ZOOM	LIVE & PB AVAILABLE
	PIP	AVAILABLE
	SEQUENCE	AVAILABLE
	SCREEN QUALITY	FULL : 720(H)X480(V) ACTIVE PIXELS 1/4 SCREEN : 360(H)X240(V) ACTIVE PIXELS
RECORDING /PLAY FUNCTION	SPEED	0.1~30 FRAME/SEC (EACH CHANNEL)
	MATERIAL	HDD
	COMPRESSED PICTURE	JPEG
	PICTURE RECORDING METHOD	FIELD SWITCHER METHOD FULL SCREEN RECORDING
	REC. MODE	REAL-TIME/ TIME-LAPSE / EVENT
OTHER FUNCTION	TRACK PLAY	SEARCH, STILL
	WEB INTERFACE	TCP/IP with client software
	POST ALARM FUNCTION	1~59SEC, CONTINUOUS TIMING ESTABLISHMENT POSSIBILITY
	BACK-UP	CONVENTIONAL VCR, TIME LAPS VCR (VCR OUTPUT PROVIDED) REMOTE BACK-UP USING TCP/IP INTERNAL BACK-UP(MARK IMAGE)
	OTHERS	RS232C, RS485, MAX 4 ALARM INPUT
	CAMERA CONTROL	PAN/TILT/ZOOM AND FOCUS REMOTE CONTROL : EXTERNAL EQUIPMENT, WIPER,PUMP,FAN AND HEATER
	CONFIGURATION	PLUG&PLAY
	2 HDD	INTERNAL 1 OR 2 HDD ACCEPT MIXED USAGE OF HDD FROM DIFFERENT MANUFACTURERS
MECHANICAL	OPERATION TEMPERATURE	41F~ 104F (5C~ +40C)
	OPERATION HUMIDITY	LESS THAN 90%
	IR REMOTE CONTROLLER	BUILT-IN
	DIMENSION	13 INCHES IN WIDTH 445 mm x 415 mm x 130 mm
	WEIGHT	APPROX. 5KG (HDD 1EA)
	POWER SUPPLY	DC ADAPTER (12V DC 5A)

4. PICTURE IN PICTURE (PIP)

1. When it is full screen display mode, press [PIP] button to see small size pictures rotating in sequence. To select channel for full screen, just press number button from [1/5], [2/6], [3/7], and [4/8]. Of course you have to press number button for longer time to select any of number 5 to 8.


Press [PIP] button once more to return to full screen mode you started.

2. Press [SEQ] button to make fullscreen rotate just like PIP does, when it is in PIP mode.

3. You can set rotating time interval in TIMER SETUP/ MISCELLANEOUS SETUP in SETUP menu. In TIMER SETUP, you can set rotating time interval not only for PIP screen but also for FULL SCREEN and QUAD screen.

NOTICE : PIP is available just in full screen mode.

► To change the location of smaller screen, press [FRZ] button and use direction button to move to desired location.

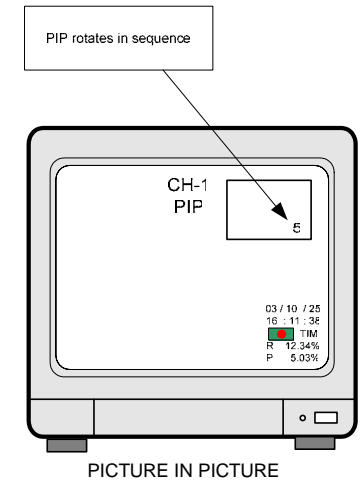


5. FRZ

1. You can make pictures displayed freeze by pressing [FRZ] button in both live view and playback mode.

In live view, it is just working when it is in full screen mode, while it works whether it is in full screen mode or 4-split or 9 split mode, in playback mode.

2. To exit FRZ mode, just press [FRZ] button again.

3. If you press number button from 1 to 4 shortly or for longer time, FRZ mode is automatically released and image of channel you pressed is displayed in full screen.

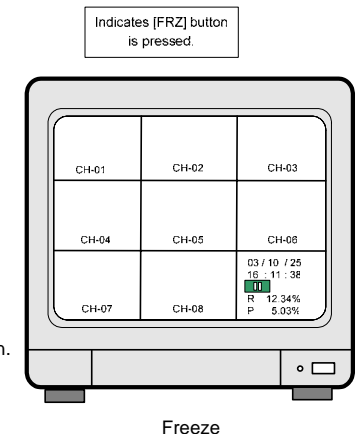


6. SEQ

1. In live mode, full screen or 4-split screen rotate in sequence, whenever you press [SEQ] button shortly.
2. If you press [SEQ] button for a long time in live view, full screen or 4-split screen automatically rotate until you press [SEQ] button for a long time again.
3. Sequence of rotation is 1, 2, 3, 4, 5, 6, 7, 8, 1, and so on, if [SEQ] button is pressed for more than a sec when number 1 channel is in full screen.
4. If [SEQ] button is pressed for a long time when it is in 4-split mode, sequence of rotation is 1/2/3/4 and 5/6/7/8, and so one.
5. In playback mode, [SEQ] button is used to move to next channel when it is in full screen mode. That is, it shows full screen of next channel whenever [SEQ] button is pressed shortly in playback mode.
6. To exit from SEQ mode, just press [SEQ] button again.

► To change rotating time interval of full screen or 4-split screen in live view, set FULL SCREEN or QUAD SCREEN value again in TIMER SETUP/MISCELLANEOUS SETUP.

7. ZOOM

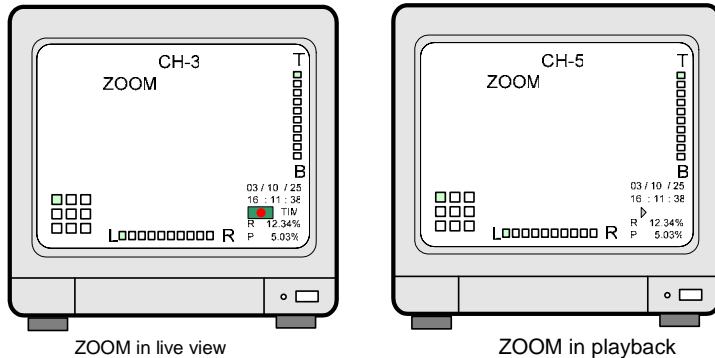

1. In full screen in live mode or in playback mode, press [ZOOM] button to see 2 times enlarged picture.
2. Vertical bar and horizontal bar on the bottom and on the right respectively show which are of picture is enlarged, and you can change area to be enlarged by pressing [LEFT], [RIGHT], [UP], and [DOWN] button.
3. Because it is enlarged 2 times digitally, picture quality is a little poor than picture you see in normal playback mode.
4. To exit ZOOM mode, just press [ZOOM] button again.

9. FACTORY DEFAULT

Press [ENTER] button when half-tone green bar is in on FACTORY DEFAULT.

FACTORY DEFAULT is parameters setting done just before delivery by manufacturer, and manufacturer recommend our users to use DVMR unit with settings done by manufacturer until our users become to have full understanding about DVMR system.

FACTORY DEFAULT can be set group by group or as a whole at once.

1) CAMERA COLOR

Parameter settings about color of camera like brightness, contrast and others of camera. If we set CAMERA COLOR at YES, all changes you made in ADJUST COLOR/CAMERA SETUP shall be deleted and return to settings done by manufacturer before delivery.

2) CAMERA TITLE

Default camera title is CH-01, CH-02, and so on.

3) MOTION MASK

Motion mask is for motion detection area, motion window, and sensitivity.

If we set MOTION MASK at YES, all changes you made in MOTION SETUP/CAMERA SETUP shall be deleted and return to settings originally done by manufacturer.

4) PAN/TILT COMMAND

As explained in PAN/TILT COM SETUP/MISCELLANEOUS SETUP, this DVMR system includes built-in protocol models like PELCO D type and we can select model of PTZ camera connected to DVMR unit. In case PTZ camera you are going to connect to DVMR unit is not one of models whose protocol is already incorporated into DVMR system, you can input protocol of PTZ camera in USER DEFINE mode/PAN TILT SMD SETUP menu.


Even though you set PAN/TILT COMMAND at YES, built-in protocol remain unchanged. However, protocol you input in USER DEFINE model is deleted if you set PAN/TILT COMMAND at YES and set at FACTORY DEFAULT. Be careful not to set at YES to keep protocol you input as a USER DEFINE model.

5) SYSTEM STATUS

It is setting related recording parameters like recording speed, IP address, and others related to system. If you set SYSTEM STATUS at YES and set at FACTORY DEFAULT, you have to set recording speed, and input IP address and others again.

6) ALL SETUP


If you set ALL SETUP at YES and set at FACTORY DEFAULT, all groups of FACTORY DEFAULT are initialized. That is, all parameter settings is done again just as done by manufacturer before delivery.

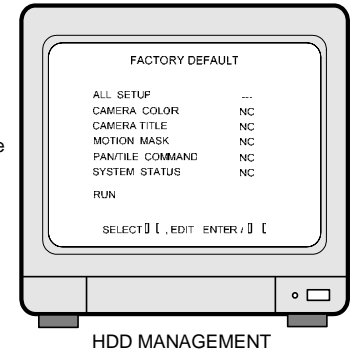

HDD MANAGEMENT

3) Example of Port Forwarding

Because ADSL is the most popular Internet service widely available in most of countries, we explain more details about how to connect DVMR unit to ADSL line via Router or Gateway, to allow accessing to this DVMR unit via Internet line far apart from DVMR unit.

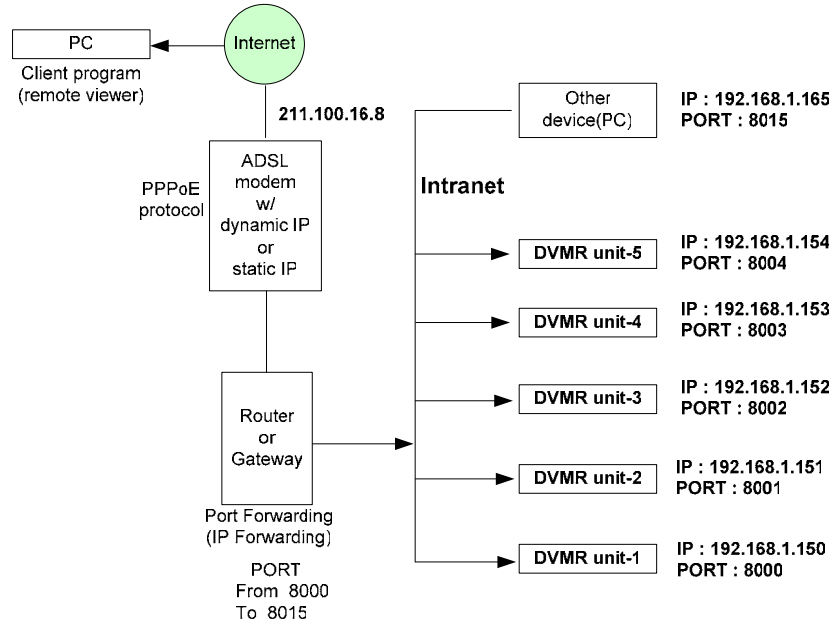

Port forwarding : Port forwarding is called differently by each of router manufacturers, like IP forwarding, IP bounding, port forwarding, port bounding or port routing. Our users can set port forwarding stated in installation manual of router or gateway without big trouble, and complete IP network to which user can connect many of our DVMRs, that are 1 ch DVMR, 4 ch DVMR, 8 ch DVMR and 16 ch DVMR, to access to those units via Internet line far apart from those units.


Port forwarding is a kind of arrangement we have to set in web site of Router or Gateway to connect external port to internal IP address, for example in above picture, PORT 8000 to IP 192.168.1.150, PORT 8001 to IP 192.168.1.151, an so on.

According to our own test with NETGEAR Router, it is working perfectly, and we recommend our users to adopt NETGEAR Router in case DVMR unit is connected to ADSL line.

3-3. Playback

1. Playback setup

- 1) Press [PLAY] button to enter into playback mode.
- 2) [PLAY] button is pressed shortly, it just start playback from the previous stop point.
- 3) If you press [PLAY] button for longer time, you can enter into GO TO MENU, and set the point from which you want to start playback. You can set starting point of playback by setting PERCENT, TIME/DATE, or EVENT LIST in GO TO MENU.
- 4) Display screen will appear as shown on the right picture.

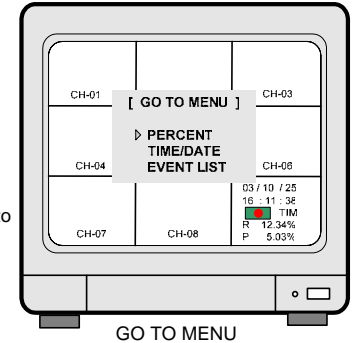


2. How to set in GO TO MENU

- 1) First select any one of PERCENT, TIME/DATE, and EVENT LIST using [UP] and [DOWN] buttons. If you select PERCENT, you are supposed to set starting point of playback by percent. If you select TIME/DATE, you are supposed to set starting point of playback by time and date. If you select EVENT LIST, you will enter into event list and select one of event list to start playback from selected event.
- 2) PERCENT
Press [ENTER] button when triangular cursor is in front of PERCENT to select target by percent. In [PERCENT GO TO] menu, start and end point of recording shall be displayed. At the same time, how many % of total HDD(1 or 2 units in DVMR unit) space is recorded is displayed. Under this line, you are requested to set starting point of playback by % using [LEFT] and [RIGHT] button and [UP] and [DOWN] button.
After you set starting point by %, press [ENTER] button shortly, and Target(starting point) is display in time/date and at the same time playback starts from the point you set, while all message is displayed. If it is the right point you want to start playback, then press [PLAY] button for longer time again to make messages disappear.
To stop playback and go back to recording mode, press [PLAY] button shortly again.
- 3) TIME/DATE
Press [ENTER] button when triangular cursor is in front of TIME/DATE to select target by time/date. In [TIME/DATE GO TO] menu, start and end point of recording shall be displayed. Under this line, you are requested to set starting point of playback by time and date. Using [LEFT] and [RIGHT] button and [UP] and [DOWN] button, set time and date from which you want to start playback. Then press [PLAY] button shortly, and it starts to playback from the point you set, however all messages are still displayed. If it is the right point from which you want to start playback, press [ENTER] button for longer time once more, and messages shall be disappeared..
- 4) EVENT LIST
Press [ENTER] button when triangular cursor is in front of EVENT LIST to select target by event list. In [EVENT-LIST GO TO] menu, list of event shall be displayed. Just select event from which you want to start playback using [DOWN] and [UP] buttons, and then press [PLAY] button shortly to start playback. If it is the right point from which you want to start playback, press [ENTER] button once more to make all messages disappeared.

5) Playback Speed Setup

In playback mode, you can adjust speed of playback by pressing [UP] or [DOWN] button easily. Just press [UP] button, and you can increase playback speed from 1x to 2x, 4x, 8x, 18x, 32x, or 64x step by step. In playback speed from 2x to 64x, DVMR system skips a certain numbers of pictures recorded in sequence as per playback speed selected for fast search.

To the contrary, playback speed is down from 1x to ½ or ¼ by pressing [DOWN] button. Playback speed lower than ¼ is practically meaningless, and we recommend our users to freeze picture by pressing [FRZ] button and move picture by picture by pressing [LEFT] or [RIGHT] button for more precise search.

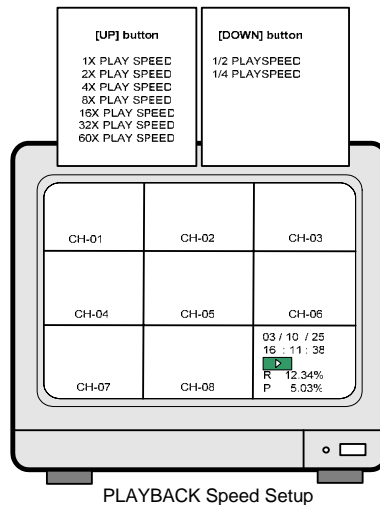


8. TCP/IP SETUP

Press [ENTER] button when half-tone green bar is on TCP/IP SETUP.


TCP/IP setup must be done correctly to access to DVMR unit via IP network from client PC far apart from DVMR unit.

MAC ADDRESS is not allowed for users to change and it is very unique number assigned by manufacturer as per IEEE regulation. IP ADDRESS, IP PORT, SUBNET MASK, and GATEWAY are what users must input manually, or our DVMR can get those data automatically in case DVMR unit is connected directly to DHCP server in IP network.

To input each element of IP data, move small triangular cursor to the item you want to change, and press [ENTER] button, then you can change using [UP]/[DOWN] and [LEFT]/[RIGHT] button.

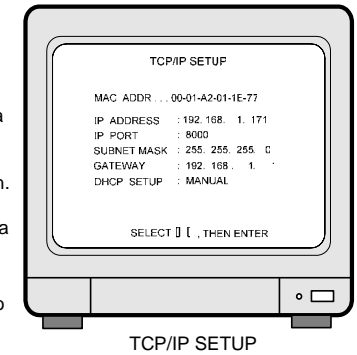


1) Concept of accessing to DVMR unit via IP network




2) Conditions of IP network

a) Accessing to DVMR unit in the same Intranet(LAN)



b) Accessing to DVMR unit via Internet line

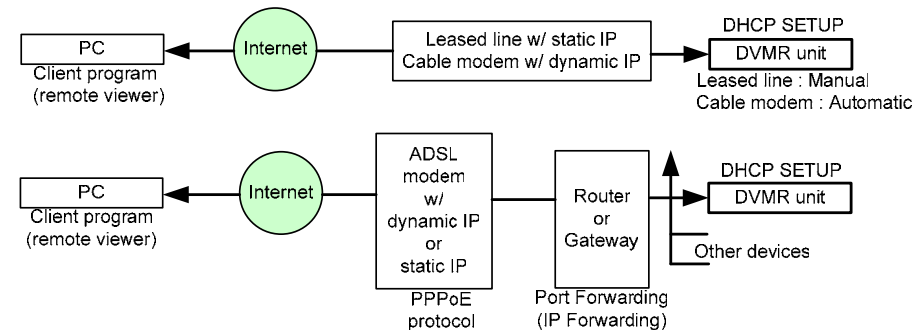

For more details of TCP/IP setting in DVMR unit and PC, refer to "Remote Viewer manual".


5) BAUDRATE SETUP

To control PTZ camera connected to DVMR unit, you have to set baud rate of communication between PTZ camera and DVMR unit.

To set baudrate, move half-tone green bar on baudrate you want to select, and press [ENTER] button then CURRENT VALUE is changed to the value you selected.

CONFIRMATION VIA RS485 PORT on the bottom of BAUDRATE SETUP is to test if communication between DVMR unit and PTX camera with set baudrate is done correctly. Move half-tone green bar to CONFIRMATION VIA RS485 PORT, and press [ENTER] button. Then you can see TEST STRING sent by DVMR unit is displayed on your PC, in case you also connected DVMR unit to PC via RS-232C port.

To save settings and exit, press [MENU] button.

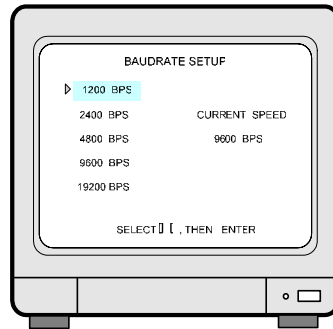

BAUDRATE SETUP

6) PASSWORD SETUP

You can set your own password in PASSWORD SETUP.

DVMR system verify users entering into SETUP menu and users who input correct password is allowed to access SETUP menu and change any settings in SETUP menu.


Also, you have to input proper password in SETTING in remote viewer(client program) to access DVMR unit via IP network, too.

Sequence to change password is as follows.

- Input current password in the first line and press [ENTER].
- Input new password in the second line and press [ENTER].
- Input new password again to confirm it and press [ENTER].
- Then "PASSWORD CHANGE" is displayed and changing password is completed.

Memorize new password and also keep it secretly.

In case you forgot password, contact dealer from which you purchased DVMR unit. All of our dealers have master Password which will enables you to enter into PASSWORD SETUP menu to generate new password.

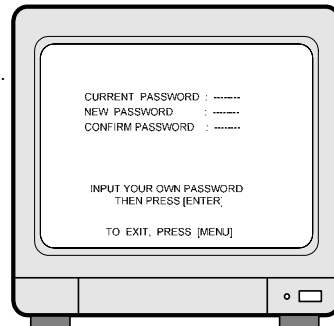

PASSWORD SETUP

3-4. SETUP

1. Basic Operation


In SYSTEM SETUP, we can change different parameters for operation of DVMR system, as you like.

However, we basically recommend our users to set at FACTORY DEFAULT, until you have full understanding about operation of DVMR system.

To enter into SYSTEM SETUP, first press [MENU] button, and enter password. After password, press [ENTER] button and you can enter into SYSTEM SETUP.

In the first operation of DVMR unit after you first install HDD or add 2nd HDD to DVMR unit, delete all data on HDD, whether it is used HDD or brand-new HDD, and set at FACTORY DEFAULT.

To go back to the very first SETUP condition recommended by manufacturer, set at FACTORY DEFAULT.

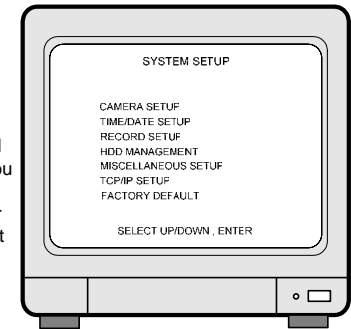

SYSTEM SETUP

You can set at FACTORY DEFAULT all in one (as a whole) or group by group. When cursor is at ALL SETUP, you can set at ON or OFF by pressing [ENTER] button. If you set ALL SETUP at ON, all groups of settings are SET as per FACTORY DEFAULT recommended by manufacturer. If you set ALL SETUP at OFF, then you are requested to set each group of settings separately one by one, ON or OFF, and groups of settings set at ON shall be reset whenever you set at FACTORY DEFAULT. To reset, you have to select ALL SET or each group of settings (ON or OFF), and then move to RUN and press [ENTER].

► Items remain unchanged even after FACTORY DEFAULT is done.

- | | |
|-----------------------------|-----------------------|
| 1. value of TIME/DATE SETUP | 2. Date stored on HDD |
| 3. ALARM LIST SETUP | 4. ADMIN password |

2. CAMERA SETUP

In camera setup, we have 3 different sub-menu as follows.

- 1) Edit camera title
Edit camera title.
- 2) Adjust color
Adjust brightness, contrast and others relating to color of camera channel by channel.
- 3) Motion setup
Set motion detection area, sensitivity, and detection window which specifies minimum size of object detected by the system.



CAMERA SETUP

3. DISPLAY SETUP

1) Edit camera title


Camera title is 9 characters in length and includes alphabet in a capital letter or small letter, numbers, and some special letters.

Default camera title is CAM 1, CAM 2, and so on for channel 1, channel 2 and so on.

Moving to a channel you want to change is done by pressing [UP] and [DOWN] button, moving next character in a specific camera title is done by pressing [ENTER] button.

On the right side of display, there is series of letters in vertical, and letter just behind triangular cursor is written whenever you press [LEFT] or [RIGHT] button.

To save and exit EDIT CAMERA TITLE mode, press [MENU] button.

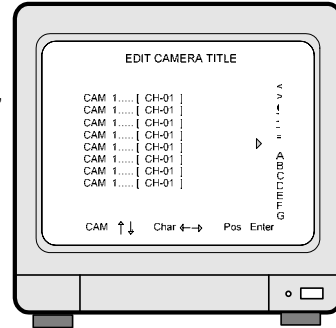

EDIT CAMERA TITLE

2) Adjust colors


You can change parameter of camera color like brightness, contrast, and others for each channel.

First select channel number whose parameters you want to change, using [LEFT] and [RIGHT] button.

When you select channel, image from selected channel is displayed. Then select element you want to change by pressing [UP] and [DOWN] button and adjust by pressing [LEFT] and [RIGHT] button. You can see how it looks like whenever you change values.

After you adjust parameters for channel you selected, then select next channel for change.

To save and exit ADJUST COLOR mode, press [MENU] button.

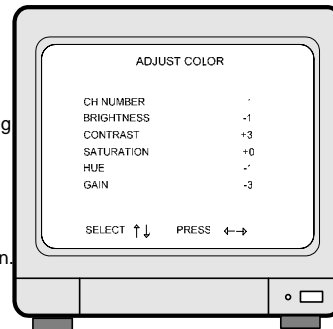

ADJUST COLOR

3) Motion setup


In motion setup mode, you can set motion detection area, sensitivity of motion, and detect window respectively, channel by channel.

It is very important to set motion detection area, sensitivity, and detect window, when you are going to record just when motion is detected.

Motion detection area is important because DVMR system just recognize motion in this area.

Sensitivity of motion specifies the sensitivity with which DVMR system detect motion, and very slow movement may not be detected if sensitivity of motion is set at very low level.

Detection windows specifies size of moving object, and DVMR system does not detect moving object which is smaller in numbers of cell than detection windows fixed in advance.

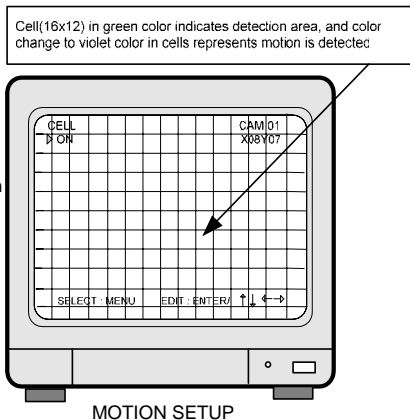

MOTION SETUP


2) ALARM SETUP

In DVMR system, 8 alarm input, one for each channel, and 1 alarm output(relay out) is provided, and we can set type of alarm sensor independently in ALARM SETUP.

Or you can set all of input alarm sensors at "NO", "NC" or DISABLE by setting ALL at "NO", "NC" or DISABLE, by pressing [ENTER] button or [LEFT] or [RIGHT] button.

In the same way, we can set type of relay out at "NO", "NC" or DISABLE, by pressing [ENTER] button or [LEFT] or [RIGHT] button.

To save settings and exit, press [MENU] button.

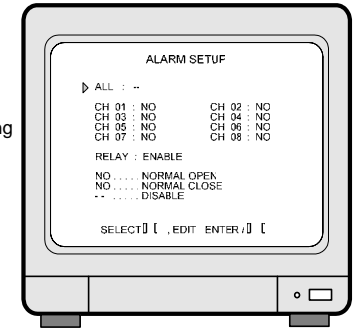

ALARM SETUP

3) TIMER SETUP

In DVMR system, we have 3 kind of timer settings as follows.

FULL SCREEN timer :

Rotating cycle time of full screen in live mode, when [SEQ] button is pressed for long time.

QUAD SCREEN timer :


Rotating cycle time of quad(4-split) screen in live mode, when [SEQ] button is pressed for long time.

PIP SCREEN timer :

Rotating cycle time of PIP screen in live mode, when [PIP] button is pressed in live mode.

If you press [SEQ] button for long time, full screen picture also rotates with time interval of FULL SCREEN timer, in addition to PIP.

To save settings and exit, press [MENU] button.

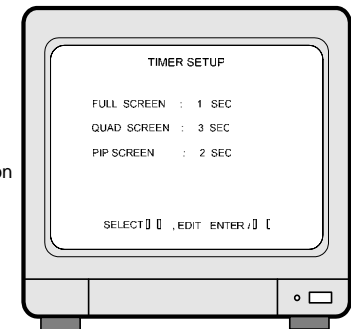


TIMER SETUP

4) PAN/TILT CMD SETUP

Just with operation buttons on the front panel of DVMR unit, we can control PTZ camera connected to DVMR unit via RS-485 port, if protocol of PTZ camera connected to DVMR unit is same as one of built-in protocols, just select model among models in PAN/TILT CMD SETUP.

In case PTZ camera you connected to DVMR unit is not a model whose protocol is incorporated into DVMR unit, you are requested to select USER DEFINE and input protocol by yourself.

To save settings and exit, press [MENU] button.

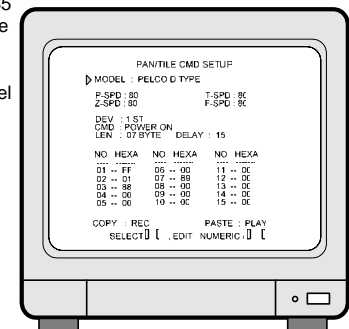

PAN/TILT CMD SETUP

6. HDD MANAGEMENT

Press [ENTER] button when half-tone green bar is on HDD MANAGEMENT.

1) HDD CLEAR


When DVMR system started to record and hard drive has data of pictures recorded, "IN USE" is displayed in square brackets.

If you want to delete all data on hard drive, press [ENTER] when half-tone green bar is on "HDD CLEAR".

Then DVMR system asks you to enter password.

Enter password and press [ENTER], and "EMPTY" is displayed in square brackets.

You are strongly requested to clear data on hard drive, when you first install hard drive or you add second hard drive, whether it is used one or brand new one after setting at FACTORY DEFAULT.

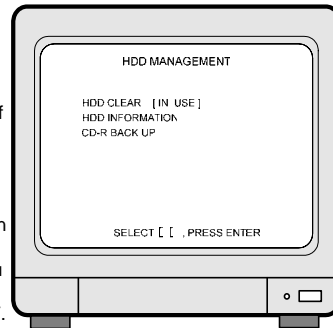

HDD MANAGEMENT

2) HDD INFORMATION

Press [ENTER] button when half-tone green bar is on HDD MANAGEMENT to enter into HDD INFORMATION. In HDD INFORMATION, you can have information of HDDs as follows.

- Date of detecting HDD
- Drive number from 1 to 22
- Manufacturer and model of HDD
- Capacity(GB) of HDD detected

7. MISCELLANEOUS SETUP

Press [ENTER] button when half-tone green bar is on MISCELLANEOUS SETUP.


In MISCELLANEOUS SETUP, we can set parameters for buzzer, alarm, timer(time interval), pan/tilt command, baud rate of RS-485, and password.

1) BUZZER SETUP


In DVMR system, we can set buzzer "ON" or "OFF" for key, video loss, alarm event, and motion event independently, in BUZZER SETUP.

Or you can set all of them at "ON" or "OFF" by setting ALL BUZZER at "ON" or "OFF", by pressing [ENTER] button.

To save settings and exit, press [MENU] button.

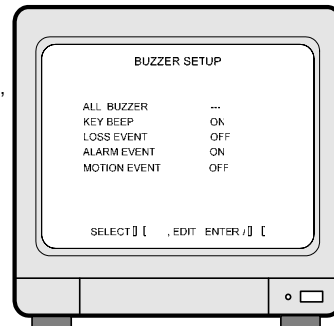

BUZZER SETUP

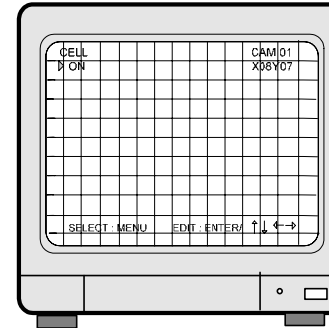


MOTION SETUP

Fix motion detection area cell by cell

In the display on the left, "CELL" on the top left is glittering, and x and y coordinates on the top right represent location of cell in selected channel, red in color, you can edit. Just besides triangular cursor on the top left shows if cell glittering in red color is "ON" or "OFF".

When status of cell glittering in red color is "ON", press [ENTER] button to change status of this cell to "OFF", which means not to detect motion in this cell. If you press [ENTER] button when it is in "OFF", then it is changed to "ON" and motion is detected in this cell.

If you press [MENU] button, display on the top left changed to "BLOCK ON" and you can set motion detection area block by block, as follows.

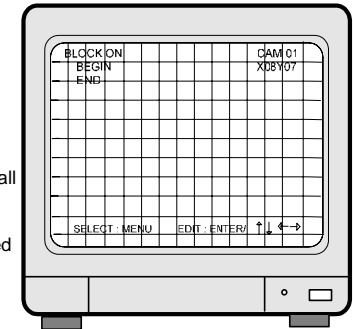

MOTION SETUP

Fix motion detection area block by block

To set motion detection area block by block, first press [ENTER] button and small triangular cursor shall be displayed just in front of "BEGIN". Then move cell glittering in red color to a position you want and press [ENTER] button again, then coordinates of cell you selected is displayed just on the right of "BEGIN" and small triangular cursor is displayed just in front of "END".

Again, move cell glittering in red color to other position and press [ENTER] button. Then cells belong to rectangular area you defined shall be changed to green color and these cells are set as motion detection area. You can repeat this process until you complete motion detection set up.

Cancel motion detection area block by block

Just as you set motion detection area block by block, you can cancel motion detection area you set, block by block. To cancel detection area block by block, press [MENU] button until "BLOCK OFF" is displayed on the top left. Then you can set block just like you set motion detection area block by block.

Cancel or set motion detection area as a whole(all cells of 16x12)

In case you want set all cells(16x12) as motion detection area or set all cells "OFF", press [MENU] button until "ALL" is displayed on the top left. Then press [ENTER] to make all cells detect motion or not detect motion.

Adjusting sensitivity of motion detection

Press [MENU] button again until "SENSITIVITY" is displayed on the top left.

After "SENSITIVITY" is displayed, press [UP] OR [DOWN] button to adjust sensitivity level from 1 to 10. In higher values, it detect motion more sensitively. If it is very low, very slow movement is not detected, even though moving object is bigger than detect window and movement is in detection area.

Set detect window

Press [MENU] button again until "DETECT WINDOW" is displayed on the top left.

Detect window is set in numbers from 1 to 20, and it represent size of moving object. Practically number represents numbers of cells(in total, 16x12), and detect window implies relative size of moving object displayed in the monitor connected to DVMR unit. Just in case movement is detected in cells more than detect window, DVMR system recognize motion is detected.

To exit


Press [MENU] button until "EXIT" is displayed on the top left, and press [ENTER] button to save settings and exit.

4. TIME/DATE SETUP

Press [ENTER] button when half-tone green bar is on TIME/DATE SETUP.

Select items you want to change using [UP] and [DOWN] buttons, and change values using [LEFT] and [RIGHT] buttons.

After you set all, press [MENU] button to save you set and exit.

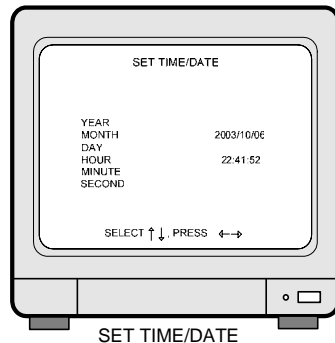

SET TIME/DATE

5. RECORD SETUP

Press [ENTER] button when half-tone green bar is in on RECORD SETUP.


1) RECORD TYPE

When half-tone green bar is on RECORD TYPE, press [LEFT] or [RIGHT] button to select recording mode you want.

TIMER recording type indicates recording continuously at set recording speed(TIME INTERVAL).

MOTION recording type indicates recording just in case motion is detected for DURATION time at set recording speed (TIME INTERVAL).

ALARM represent recording just in case alarm is activated for DURATION time at set recording speed(TIME INTERVAL).

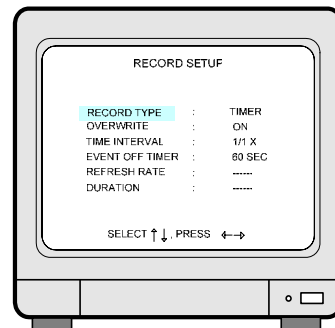

RECORD SETUP

2) OVERWRITE

Move half-tone green bar to OVERWRITE to set if you will overwrite or stop recording when hard drive is full and just display warning message.

Press [LEFT] or [RIGHT] button to set at "ON" or "OFF". "ON" implies overwriting allowed when hard drive is full, while "OFF" implies stop recording when it is full.

We recommend to set at "ON" not to make DVMR unit stop recording only with the reason it is full with data.

3) TIME INTERVAL

TIME INTERVAL implies recording speed, and 1/1 represents maximum recoding speed of this DVMR system, that is 60 fields/sec in total.

When half-tone green bar is on TIME INTERVAL, press [LEFT] or [RIGHT] button to select recording speed you want.

TIME INTERVAL set here is applied for all RECORDING TYPE, that are, TIMER, MOTION, or ALARM.

Recording speed for each TIME INTERVAL is as follows.

(based on NTSC system)
 1/1 x : 60 fields/sec in total
 1/2 x : 30 fields/sec in total
 1/3 x : 20 fields/sec in total
 1/4 x : 15 fields/sec in total

·
·
·

and so on

4) EVENT OFF TIMER

EVENT OFF TIMEER sets time interval between event(video loss, motion detected, and alarm) to event not to enlist event which happen too frequently.

For example, if you set EVENT OFF TIMER at 60 sec, and motion detected now is detected less than 60 sec after previous motion, it is not enlisted in event list. However, motion detect now is after more than 60 sec, it is enlisted in event list. It is same for alarm or video loss.

EVENT OFF TIMER is to restrict event to be enlisted in event list, and it is useful in case you set recording mode at motion detection mode, alarm mode.

In case motion is detected very frequently, event list shall be full with just motion detected, and it is meaningless to have such event list.

Default value set by manufacturer is 60 sec.

5) REFRESH RATE


When you record in motion recording mode, and motion is detected in one of 8 channel and no motion is detected in all other channels in some times.

In this case, we may see pictures fairly long hours ago in playback in channels where no motion is detected, while pictures in a channel where we have many motion detected is updated very frequently.

Refresh rate is time interval for recording pictures from channels where no motion is detected for a long time. That is, even though there is no motion detected, DVMR system records an image as per this REFRESH RATE time interval to show relatively recent pictures in corresponding channels, even though there are no motions detected.

6) DURATION

It is motion duration or alarm duration. When DVMR records in motion recording mode or alarm recording mode, it records for DURATION time in case motion is detected or alarm is activated, respectively.

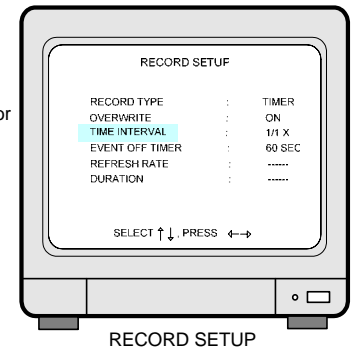

RECORD SETUP